


AQUADECK®

POOLCOVERS

Installation instructions

Supported beam

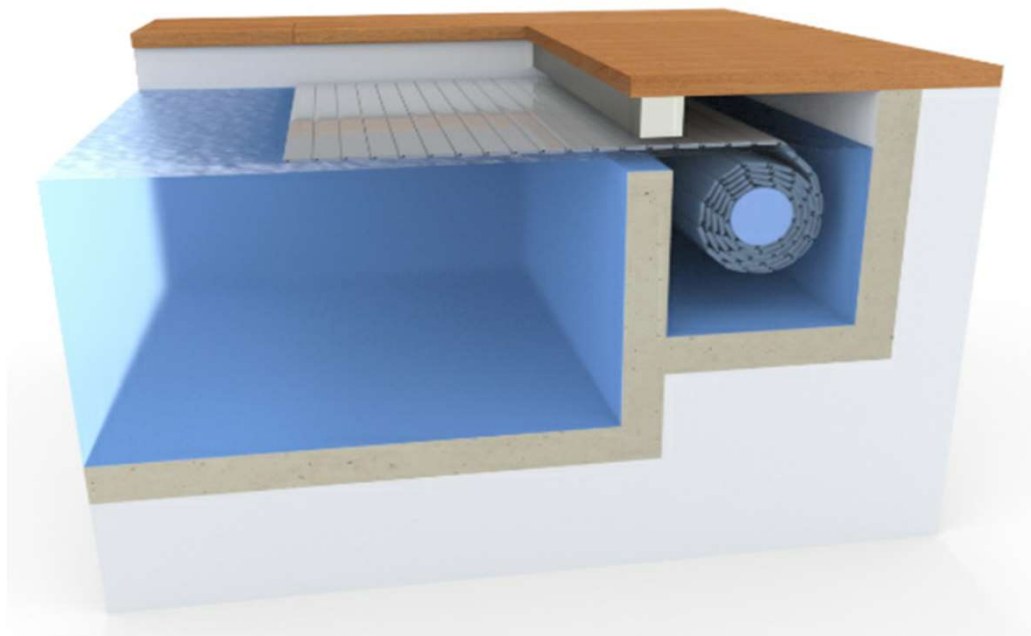










Close _____
to be **perfect**

AQUADECK®

POOLCOVERS

Tools required for assembly:

Not included


Impact drill	
Tape measure	
Marker/Pencil	
Perforating punch 8 mm	
Sealant gun	
Hammer	
Ring wrench 2x (19/17/13 mm)	
Allen key 4/5/6 mm	
Stone drill 12/11/6 mm	

Close _____
to be **perfect**

AQUADECK®

POOLCOVERS

Supported beam standard

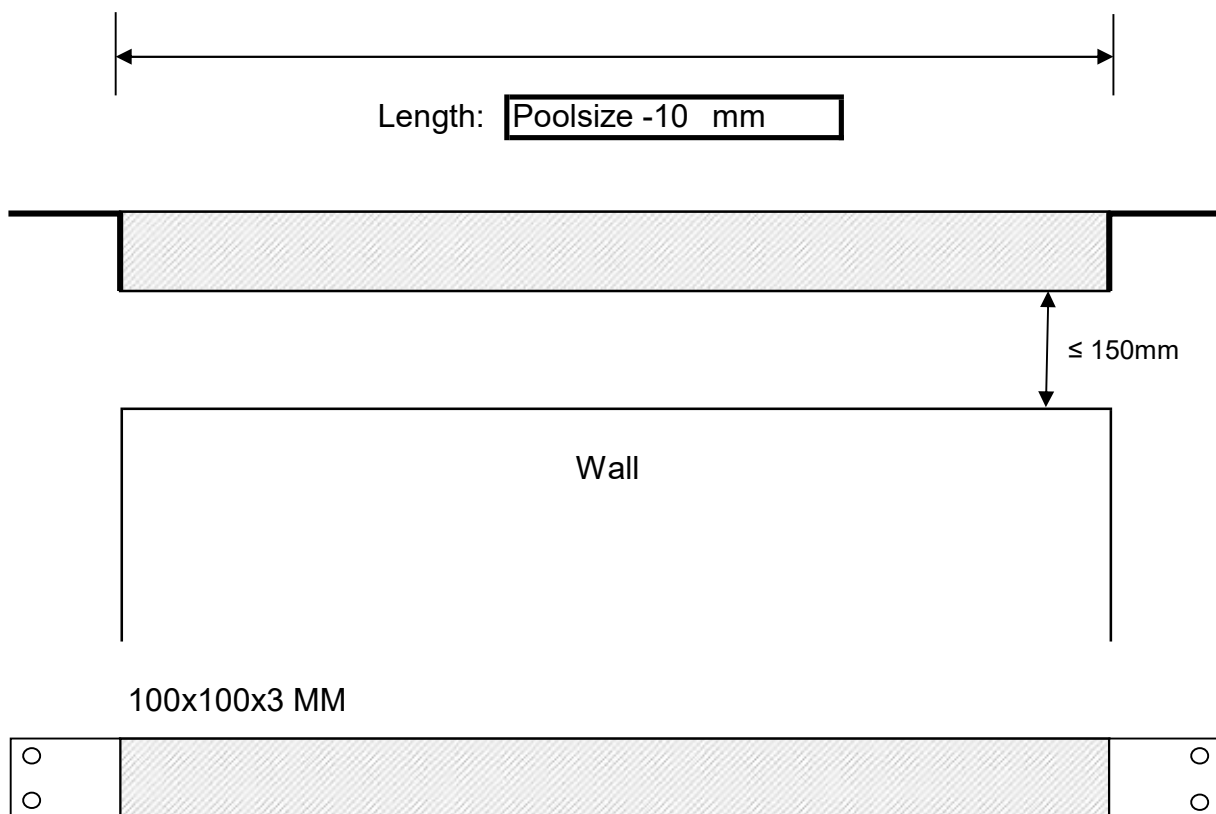

RVS: 304 or 316

Included:

4x DIN933	
4x CI13.0840.1620	
4x Weco M8	

Close _____
to be **perfect**